



TAMRON ADAPTALL-2

OWNER'S MANUAL
MODE D'EMPLOI
GEBRAUCHSANLEITUNG
MANUAL DE INSTRUCCIONES
MANUALE DELLE ISTRUZIONI



ENGLISH

The TAMRON ADAPTALL-2 Custom Mount attaches simply and securely to your TAMRON Lens becoming in effect an integral part of the lens. With the Tamron ADAPTALL-2 Custom Mount System, your lens can be used with virtually all the most popular SLR cameras by attaching the appropriate mount.

HOW TO ATTACH THE MOUNT TO THE LENS

- Be sure to set the aperture ring of the lens to the maximum aperture.
- Align the green dot on the base of the lens with the green dot on the ADAPTALL-2 Mount.
- Press the mount downward and turn clockwise until the mount is locked into place (while turning, the silver release button will slowly depress and then will open and click when the mount locks into position).
- Slide the coupling key of the mount into the matching slot of the lens aperture ring. Sometimes the coupling key will slide into the matching slot after step C and therefore this step may not be necessary.

NOTE: Some mounts have two coupling keys. If the custom mount you own has two coupling keys, be sure to engage the two keys into matching slots on the lens aperture ring.

- Your Tamron lens with the Adaptall-2 custom mount can be fitted to your camera in the same manner as the camera manufacturer's lenses.

TO REMOVE THE MOUNT FROM THE LENS

- Before removing the custom mount, be sure to move the aperture ring of the lens to the maximum aperture.

NOTE: If your custom mount has AE lock mechanism and whose aperture ring is set to the AE position, depress the AE lock button to release the AE setting, and then move the ring to the maximum aperture.

- Hold your lens securely and while depressing the silver release button, turn the mount counterclockwise.
- Lift the mount from the lens.

NOTE: ADAPTALL-2 MOUNTS ARE DESIGNED FOR USE ONLY WITH TAMRON SP AND ADAPTALL-2 LENSES.

For complete details for all Tamron lenses and mounts, see your local camera dealer.

SPECIAL INSTRUCTIONS

FOR PENTAX-KA MOUNT

- Tamron's Adaptall-2 Custom Mount for Pentax-KA is designed for use only with the Pentax-A series of cameras.
- Most Tamron lenses have a minimum aperture of F/32. However, due to design limitations of Pentax cameras, the minimum aperture of F/32 cannot be used even if your lens has this minimum aperture. The minimum working aperture of your lens is F/22 when using with Pentax-A series of cameras. (The position of F/32 serves as AE position only).

NOTE:

When using Tamron lenses with a maximum aperture of F/4.5 or slower (Maximum aperture at wide end) in the Program AE or Shutter-priority AE position, underexposure can be caused if the indicated aperture value in the viewfinder is faster than the original maximum aperture value (F/4.5 or slower). In this case please use the Aperture-priority AE or Manual modes.

The only Tamron lens which may have this limitation is: SP200-500mm F/5.6 (Model 31A)